



SDS1015-10
SERVO AMPLIFIER
FOR BRUSH SERVOMOTORS

USER GUIDE

December 2008

Important Notice

This document is subject to the following conditions and restrictions:

- This document contains proprietary information belonging to Servo Dynamics. This information is provided for the purpose of assisting users of the servo drive in its installation.
- The text and graphics in this document are for the purpose of illustration and reference only.
- The information in this document is subject to change without notice.

Revision History:
Version 1.00 December 08, 2008

| | |
|--|-----------|
| 1. Introduction..... | 4 |
| 1.1 Description..... | 4 |
| 1.2 Technical Specifications..... | 5 |
| 2. Safety Information..... | 6 |
| 2.1 Electrical Cautions..... | 6 |
| 3. Installation..... | 7 |
| 3.1 Matching the DynoDrive to the Motor..... | 7 |
| 3.2 Mounting Dimensions..... | 8 |
| 3.3 Connector Information..... | 9 |
| 3.3.1 J1, J2 – Control I/O Connection..... | 9 |
| 3.3.2 J4A - Servomotor Connection..... | 10 |
| 3.3.3 J5 - Servomotor Connection..... | 10 |
| 3.5 Potentiometers -Adjustments..... | 11 |
| 4. Operational Modes | 12 |
| 4.1 Torque Mode..... | 12 |
| 4.1.1 Torque Mode – Factory Potentiometer Settings..... | 12 |
| 4.1.2 Torque Mode - Setup | 13 |
| 4.2 Velocity Mode | 14 |
| 4.2.1 Velocity Mode – Factory Potentiometer Setting..... | 14 |
| 4.2.2 Velocity Mode- Setup | 15 |
| 5. Troubleshooting | 16 |
| 5.1 Diagnostic LEDs..... | 16 |
| 5.1.1 Green LED | 16 |
| 5.1.2 Red LEDs:..... | 16 |
| 5.2 Other Conditions..... | 17 |
| 5.3 Test Points..... | 17 |
| 5.4 Contact Information..... | 18 |

