



SDS1015-10
SERVO AMPLIFIER
FOR BRUSH SERVOMOTORS

USER GUIDE

December 2008

Important Notice

This document is subject to the following conditions and restrictions:

- This document contains proprietary information belonging to Servo Dynamics. This information is provided for the purpose of assisting users of the servo drive in its installation.
- The text and graphics in this document are for the purpose of illustration and reference only.
- The information in this document is subject to change without notice.

Revision History:
Version 1.00 December 08, 2008

1. Introduction.....	4
1.1 Description.....	4
1.2 Technical Specifications.....	5
2. Safety Information.....	6
2.1 Electrical Cautions.....	6
3. Installation.....	7
3.1 Matching the DynoDrive to the Motor.....	7
3.2 Mounting Dimensions.....	8
3.3 Connector Information.....	9
3.3.1 J1, J2 – Control I/O Connection.....	9
3.3.2 J4A - Servomotor Connection.....	10
3.3.3 J5 - Servomotor Connection.....	10
3.5 Potentiometers -Adjustments.....	11
4. Operational Modes	12
4.1 Torque Mode.....	12
4.1.1 Torque Mode – Factory Potentiometer Settings.....	12
4.1.2 Torque Mode - Setup	13
4.2 Velocity Mode	14
4.2.1 Velocity Mode – Factory Potentiometer Setting.....	14
4.2.2 Velocity Mode- Setup	15
5. Troubleshooting	16
5.1 Diagnostic LEDs.....	16
5.1.1 Green LED	16
5.1.2 Red LEDs:.....	16
5.2 Other Conditions.....	17
5.3 Test Points.....	17
5.4 Contact Information.....	18

